



# **Instruction Manual**

### IP-CAM852

© 2023 System Q Ltd

ZipNVR.com

#### IP-CAM852

# **Table of Contents**

Part 1	Introduction	1
2	Essential Tools and ZipFinder	. 1
<b>Part 2</b>	Connections and Dimensions	<b>2</b> . 2
Part 3	Mounting and SD Card Installation	3 . 4
<b>Part 4</b> 1 2	Setup Options PoE ZIP NVR Non-PoE ZIP NVR	5 . 5 . 6
Part 5	How to Login via Browser	7
<b>Part 6</b>	Browser Menu Settings IP-CAM852W	<b>9</b> . 9
Part 7	Extra Resources 1	4
1 2 3 4	Adding IP Cameras to a ZIP recorder	14 14 14 15
Part 8	General Maintenance 1	6
<b>Part 9</b>	Specifications 1	<b>7</b> 17
Part 10	Conditions 1	8
	Index 1	9



I



### Introduction

#### 1.1 Key Features - IP-CAM852W

The IP-CAM852W is a eyeball style camera designed for the more budget conscious IP systems. The eyeball supports motion detection and has a tough metal exterior, ideal for both outdoor and indoor uses. Up to 45m IR range (true day/night filter), 2MP resolution, built in PoE, H265 and H264 codec.

- PoE & 12V
- SD card slot
- Micro SD Card Slot
- Audio In Audio Out
- 2.8-12mm Manual Vari-focal lens
- 2MP
- IR
- Perfect for ZIP NVR Kits

#### **1.2 Essential Tools and ZipFinder**

To install this product you will need:

- Laptop / Windows PC
- Screwdriver
- Drill
- Hammer
- ZIP NVR or DVR
- PoE Switch / 12V DC power supply
- Ethernet CAT5/5e/6 Cable

#### **ZipFinder - IP Camera Configuration Tool**

ZipFinder is a Windows PC software for discovering and configuring IP cameras a network.

Use ZipFinder on non-PoE installs, to help problem solving issues such as forgotten or unknown IP Addresses.

To download visit ZipNVR.com

-	Search					Filmator 6	ndar	1
NO	P	Media Port	Web Port	Channel	Device Type	Device	nuer	Г
1	192 168 2 201	8285	.85	2	IP-CAMISTOR	V6.2 0.20	Anternation	
2	102 168 2 184	0003	80	1	IP.CAMEISR	12123_481222	265 255 265 3	
	102 168 2 168	0993	80	1	P.CAMISOW	V2123_161222	265 255 255 0	
4	192 168 2 156	0003	80	1	P.CAME30W	V2122_161207	265.265.0.0	
1.6	102 158 2 159	9993	80	+	IP-CAM630W	V2.1.2.3_161222	255 255 265 0	
1 4	102 168 2 154	0003	20	1	IP-CAM0150	V2.1.2.2_161207	255 255 255.0	
1.7	102.168.2.152	0993	80	1	IP.CAME158	V2122_101007	255.255.255.0	
1.1	102.168.2.162	9903	86	1	IP-CAMB 15B	V2 133_170110	255 255 255.0	
	<u>190, 168 0, 140</u>	9995	86	1	IP-CAMBOW	V2.12.3_101222	255 216 265 3	
User In UserN	do anne admin	Device info	192.105.2.210	Media Port 42	243	WebPart 05		



#### **Connections and Dimensions**

#### 2.1 IP-CAM852W



#### Powering the camera

Option 1 - Power the camera from 12V DC (via the 2.1mm DC Socket), the current consumption is 750mA.

The camera is polarity sensitive so connections must be correctly made.

Option 2 - Power the camera using a PoE 48V RJ45 Socket

When connecting ZIP PoE NVR plug the camera directly into the NVRs built in PoE switch.

The camera should automatically become visible after being connected for approximately 1 minute.







\*Dimensions Exclude Bracket

### Mounting and SD Card Installation

For local recording on the camera itself an SD card must be installed.

Recording time will vary dependent upon: SD card size and encoding settings

32GB SD Card ≈ 31 hours 64GB SD Card ≈ 62 hours 128GB SD Card (MAX) ≈ 124 hours 256GB SD Card (MAX) ≈ 248 hours

The camera can be set to only record when triggered via motion detection, alarm input or AI smart, this maximises the recording time achievable.

Remove power from the camera when inserting / removing the SD card.



### 3.1 Eyeball



A template is provided in the box for marking the hole positions for the fixing screws.



#### **Setup Options**

#### 4.1 PoE ZIP NVR

When connecting to a **ZIP PoE NVR** plug the camera directly into the NVR's built in PoE switch.

The camera should automatically become visible after being connected for approximately 1 minute.

The 100m distance for a camera can be increased when the PoE Mode is set to EPoE.

In the menu on a ZIP PoE NVR go to:-

#### Video > IP Channels > PoE Mode





#### 4.2 Non-PoE ZIP NVR

When connecting cameras to a **Non-PoE NVR**, they are first connected to an external network switch which is in-turn connected to the NVR as shown below.



See <u>Extra Resources</u> for more information on **Adding IP Cameras manually** to a ZIP Recorder.



#### How to Login via Browser

The AI smart features can be configured in a ZIP recorder or directly in the browser interface of the camera (standalone)

Only one smart detection feature can be enabled at any given time.

# See the NVR or DVR manual for information on configuring these features with a ZIP recorder.

Follow the steps below for configuring the settings directly in the camera via a browser for standalone setup.

You will need...

- Windows Based PC/ Laptop connected to router/ PoE switch
- ZipVision Pro App on Mobile Device
- PoE Switch connected to Network/ Router
- Ethernet network cable
- ZipFinder software, available via this link below:-

www.softcctv.com/store/ltem/Zip-Finder-IP-CCTV-Security-Camera-Discovery-Tool

NOTE If the PC being used is on a different IP range to the PC then add the IP range of the camera to the PC using the below guide:-

PDF Version :- <u>http://www.cctvmanuals.com/pdf/tips/How\_to\_add\_an\_IP\_Range.pdf</u> HTML Version :http://www.cctvmanuals.com/tips/How\_to\_add\_an\_IP\_Range.pdf

http://www.cctvmanuals.com/tips/How\_to\_add\_an\_IP\_Range/index.html

1. Plug the camera's RJ45 port with a network cable into a PoE switch



2. Using ZipFinder on a Windows Based PC/ Laptop **Search** and then tick the camera

2	ZI finder								
	Sea	rch	Upgrade	Config					
	No.	IP	Media Port	Web Port	Channel				
	1	<u>192.168.10.1</u>	8240	80	1				

3. Select Net Mode = **DCHP**, then click **Modify** 

Web Port			Modify
Net Mode	DHCP	•	

4. Search again, to get the updated IP address.

5. **Select** the IP address of the camera, Internet Explorer will pop-up, and ask to download and install the plug-in.

6. **Download**, **install** and follow the steps for the plug-in installation, then re-load the browser by **selecting** the IP address again.

5. Login to the IP Camera, the default login details are:-

Default IP	192.168.10.1
DCHP	Off
User Name	admin
Password	777777



### **Browser Menu Settings**

#### 6.1 IP-CAM852W

The menu can be configured directly in the browser interface of the camera (standalone), in Remote Setting you will find the menu settings below:-

Video	Live		Name	Camera (user editable)	
			Date Format	DD/MM/YYYY /	
				MM/DD/YYYY/	
				YYYY/MM/DD	
			Time Format	<b>24 Hour</b> / 12 Hour	
			Flicker	50Hz/ <b>60Hz</b>	
			Control		
			Show Name	Enable / Disable	
			Show Time	Enable / Disable	
			OSD Self-	Enable / <b>Disable</b>	
			adaptive		
			Save / Refres	sh	
	Image Cont	rol	Image Setting	Automatic Mode / Colour	
				Mode / Black White Mode /	
				Image Mode / Schedule	
			IR-CUT Delay	/1 -36 (Default <b>2</b> )	
			IR-LED	SmartIR / Manual	
			Angle Trad	<b>180</b> / 0	
			Mirror	Disable / Vertical / Horizontal /	
				All	
				DWDR / HLC / BLC / Disable	
			Compensatio		
				Automatic mode / Manual	
			Shutter	Automatic mode / Manual	
				1/5 to 1/200000 / Flickerless	
				OFF / Automatic Mode /	
				Manual	
				t / Refresh	
	Privacy Mas	sk	Enable / Disa	ble	
Record	Encode	Mainstrea	Resolution	1920 x 1080	
		m	FPS	1 - 30 (Default <b>30</b> )	
			Video Code	<b>H.265</b> / H.264	
			Туре		
			Video Code	Main Profile	
			Level		
			Bitrate	CBR / VBR	
			Control		
			Bitrate Mode	Predefined / User-Defined	



IP-CAM852

			Bitrate	256 to 4096 (Default <b>4096</b> )	
			IFrame	1 to 120 (Default <b>60</b> )	
			Interval		
			Audio	Enable / Disable	
			Save / Refres	sh	
		Substream	Resolution	<b>640</b> x 480	
			FPS	1 – 20 ((Default <b>20</b> )	
			Video Code	H.265 / H.264	
			Туре		
			Video Code	Main Profile	
			Level		
			Bitrate	CBR / VBR	
			Control		
			Bitrate Mode	Predefined / User-Defined	
			Bitrate	128 to 1024 (Default <b>512</b> )	
			IFrame	1 to 80 (Default <b>40</b> )	
			Interval		
			Audio	Enable / Disable	
			Save / Refres	sh	
	Record	Record	Stream Mode	Mainstream / Substream	
			Record	Enable / Disable	
			PreRecord	Enable / Disable	
			Netbreak	Enable / Disable	
			Save / Refres	sh	
		Schedule	User Definable		
	O a taux		Save / Refres	sh	
Event	Setup	Motion	Enable	Enable / Disable	
			Sensitivity	1 to 8	
			Save / Refres	sh	
	Alarm	Post	OFF / 5s / 10	s / 20s / 30s	
		Recording	Enable / Disable		
		Sena			
		F I F Picture			
		Inland			
		Fnahle	Enable / Disa	able	
		Record			
		Save / Sch	ı Iedule / Refres	h	
Network	General	General		Enable / Disable	
			IP Address	User-definable	
			Subnet Mask	User-definable	
			Gateway	User-definable	
			DNS 1	User-definable	
			DNS 2	User-definable	
			Video	Enable / Disable	
			Encryption		
			Transmission		

		-		
			Save / Refres	h
	Port	HTTP Port	User-definable	9
	Configuration	Client Port		
	U U	HTTPS		
		Port		
		RTSP Port		
			Enable / Dical	blo
		r zr Epoblo		Die
		Ellable Sovo / Pofr	i nach	
	Email	Save / Rell		Enchla / Dischla
	Email		Eman En en milien	
			Encryption	OFF / SSL / ILS / Automatic
			SMTD Port	1 65535
			SMIF FUIL	l ear definable
			Username	
			Password	
			Sender	
			Receiver 1	
			Receiver 2	
			Receiver 3	
			Interval	
			Save / Test / I	Refresh
	RTSP		RTSP Enable	
			Anonymous	Enable / Disable
			Login	
			Instruction:	
			rtsp://IP·RtspF	Port/ch01/A
			A: 0(main stre	eam) 1(sub stream) 2(mobile
			stream)	
			Save / Refres	h
	פאסס			Enable / Disable
			Sonior	
				INO_IF / D finding
			Hostname	
			Username	User-definable
	<b>_</b>		Password	User-definable
Storage	Disk	Select Disk	( 	
		Overwrite OFF / Auto		
		Save / Forr	<u>nat Hard Disk</u>	/ Refresh
	Audio	Enable	Enable / Disal	ble
		Audio		
		Output	0 – 8	
		Volume		
		Input	0 – 8	
		Volume		
		Audio	G711A / G71	1U
		Code Type		
		Save / Refr	esh	
	Cloud	Cloud	Enable / <b>Disabl</b>	e
		Storage		



			Dropbox				
		Driver	Driver Customise (Default <b>IP-PTZ650W</b> )				
		Name	Name				
		Refresh / Save / Activate Cloud					
System	General	Date and	server				
		Time	mode	synchronization			
			Date Format	Day/Month/Year			
				Year-Month-Day			
				Month/Day/Year GMT -12:00 to GMT + 13:00			
			Time Zone				
			Time Format	24Hour / 12	Hour		
			System Time	User-definab	le		
			Server	Time window	is com /		
			Address	time nist gov	/ pool ntp org /		
			AUUIESS	Define User	, been been been been been been been bee		
			Save / Synchr	ronize computer time / Refresh			
		Davlight	Davlight	Enable /	Set by week / set		
		Saving	saving time	Disable	by date		
		Time	Start Time	User-definab	le		
			End Time	User-definab	le		
			Time Offset	1Hour / 2 hou	Irs		
			Save / Refres	ave / Refresh			
	Multi_l Iser	Customize Each user	Password	Ilsername	l Iser-definable		
			(Edit)	Password	l Iser-definable		
				Password	l Iser-definable		
				Strength			
				Confirm			
		Refresh					
	Maintain			System /	Search		
	Ivianitani	LUG	Log Type	CON / Alarm	Search		
				/ Account /			
				Record /			
				Storage /			
				Network / All			
			Start Time	User-definab	le		
			End Time	User-definab	le		
		Load	All / Video / R	ecord/Event/	AI/Network/		
		Default	Storage / Svs	tem			
		Dendalt	Save /				
			Refresh				
		Upgrade	Path	Search Local	Upgrade		
		opgrade		Files			
		Save /	Import File	Search Loca	Import		
		Load		Files			
			Export File	Search Loca	Export		
			Name	Files			
		Auto	Auto-	Enable / Disa	able		
		Reboot	maintenance				
			Time	Date / Week	/ Month		



		Mon / Tues / Wed / Thur / Fri / Sat / Sun Time		
		Save / Refresh / Reboot		
Information	Device ID			
	Device Name			
	Device Type			
	Hardware Version			
	Software Version			
	Web Version			
	Mac Address			
	P2P ID			
	Refresh			



### **Extra Resources**

#### 7.1 ZipNVR.com Website

The Zip NVR has a range of information on the cameras and NVRs, manuals, software, tools and support:-

#### www.zipdvr.com



### 7.2 Adding IP Cameras to a ZIP recorder

How to guide on Adding IP Cameras:-

www.zipdvr.com/howto/TIP459-How-To-Add-IP-Cameras.html

### 7.3 Al Setup

See the ZIP NVR full manual for more information on AI setup; *Note: AI Features will vary depending on model* 

#### **Full Instruction Manual**



https://systemq.com/PDF/manual/xZIP4.pdf



#### 7.4 ZIP Firmware

Firmware for the zip products are available online:-

www.zipdvr.com/firmware.html

Compare the firmware in the product against that available online.

### **General Maintenance**

- Routinely clean the camera to prevent dust build up as this can effect the performance of the camera. It is recommended to use a damp non-abrasive microfibre cloth.
- Routinely check the connections for power and data to ensure no water ingress and corrosion.
- Check that the cameras are firmly attached to the wall or mounting bracket.
- Check playback in the recorder to ensure the camera is recording and triggering properly.



### **Specifications**

### 9.1 IP-CAM852W

Image Sensor	1/2.7" Progressive CMOS
Resolution	2MP 1920(H)×1080(V)
Lens Type	2.8-12mm Manual Vari-focal Lens
Shutter	1/5 ~ 1/20000s
Day/Night	Mechanical (True Day-Night)
Min. Illumination	0 (With IR On)
IR Range	Up to 45m
Digital Noise	3D DNR
Reduction	
Video Compression	H.264 / H.265
Video Bitrate	128Kbps ~ 4Mbps
Stream Options	Mainstream, SubStream
System Compatibility	ONVIF (Profile S, Profile G, Profile T)
Connection	RJ45 10M / 100M Ethernet PoE
SD Card	Micro SD Card Slot (up to 256GB)
Audio (RCA)	1 Input / 1 Output
Input Voltage	PoE or 12V DC 700mA (PSU Required)
Consumption	8W Max
Operating	From -30 to 55 deg°C
Temperature	
Backlight Control	D-WDR
Use	IP66 For External Use
Dimensions	Ø135mm x (H) 127mm



### Conditions

All specifications are approximate. System Q Ltd reserves the right to change any product specifications or features without notice. Whilst every effort is made to ensure that these instructions are complete and accurate, System Q Ltd cannot be held responsible in any way for any losses, no matter how they arise, from errors or omissions in these instructions, or the performance or non-performance of the equipment that these instructions refer to.



This symbol on the products and/or accompanying documents means that used electronic equipment must not be mixed with general household waste. For treatment, recovery and recycling please return this unit to your trade supplier or local designated WEE/CG0783SS collection point as defined by your local council.



© Copyright 2020 ZIP and NiteDevil are registered trademarks of System Q Ltd, Chesterfield. Derbyshire. S40 2WB



# Index

- C -

Checking and cleaning the camera 16

- D -

Download 1

# - E -

Extra Resources and help 14 Extras 1

# - | -

Installation 3

# - L -

Login via browser interface 7

# - M -

Maintenance 16

# - R -

Recording 3

# - S -

SD Card 3 Setup and Connection Options 5 Software 1 Specification 17

# - T -

Tools 1

ZipFinder 1