



Features

- Easy To Use
- Control The OSD Via The Co-ax Cable
- Configure The Camera Next To The DVR

Specification

FUNCTION	SPECIFICATION
Compatibility	CAM800
Input Connection	BNC Socket
Output Connection	BNC Plug
Power	2 x AAA Batteries
Dimensions	120 x 42 x 20mm

Options Available

PART CODE	DESCRIPTION
CAM802	UTC Controller

Other Products To Consider



External With IR In
Graphite Grey
CAM800G



External With IR In
Iridium Silver
CAM800S



External With IR In
Polar White
CAM800W


Configure The Camera From Next To The DVR

The CAM802 gives you up the co-ax control of the camera's OSD menu. This allows you to configure the camera whilst sat next to the DVR rather than up a ladder in the cold.

The controller connects in-line between the camera and DVR and requires 2 x AAA batteries.

How To Connect The CAM802

Disconnect the BNC cable carrying the camera's video feed from the rear of the DVR. Connect the BNC cable to the CAM802 controller and then connect the CAM802 to the DVR. After the camera has been configured the CAM802 can be disconnected and the BNC cable can be re-connected to the DVR.

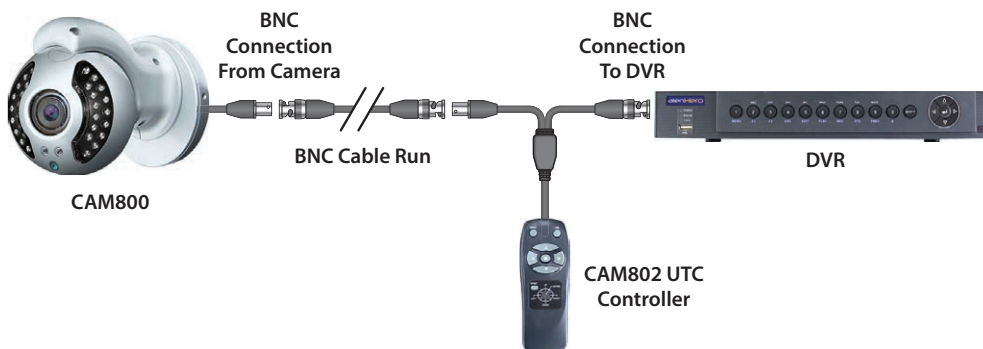

For more information camera settings and what they do see online tip 295 ▶▶▶



All specifications are approximate. System Q Ltd reserves the right to change any product specifications or features without notice. Whilst every effort is made to ensure that these instructions are complete and accurate, System Q Ltd cannot be held responsible in any way for any losses, no matter how they arise, from errors or omissions in these instructions, or the performance or non-performance of the equipment that these instructions refer to.

This symbol on the products and/or accompanying documents means that used electronic equipment must not be mixed with general household waste. For treatment, recovery and recycling please return this unit to your trade supplier or local designated collection point as defined by your local council.

WEE/CG07835S