



DVR PTZ Keyboard Controller

PTZ735 Operations Manual



This manual might be not accurate technically or contains some minor typo errors. The contents in this manual about production description and program might be updated on an un-periodical.

Cautions:

- § The LCD is fragile, no crush or long-exposed under strong light.
- § Operation knob is fragile, please make sure product is packed with original packing material when you send it back for repairation.
- § The keyboard controller should be work in specified range of temperature and humidity.
- § Please follow the connecting method defined in this manual.

keyboard controller parametersa:

Item	Parameters
Power supply	DC12V ± 10%/50HZ
Temperature	-10 ~ 55°C
Humidity	≤ 90% RH (No cream node)
Communication	RS485 Half-duplex
Baud Rate	1200bps、2400bps、4800bps、9600bps、19200bps
Interface	5PIN Pressure Line Terminal
That way	The LCD screen
Exterior size	318 (L)X180 (W)X118 (H)mm

List of items :

Name	Quantity	Units	Remarks
5PIN Isobar plugs	1	PCS	
DC-12V Power	1	PCS	INPUT : 100-240VAC ~ 50/60Hz
《Users Manual》	1	PCS	
Certificates	1	PCS	
Warranty cards	1	PCS	

Foreword

Preface	5
Front board and back board introduction	6
1.1 Function keys on front keyboard controller	6
1.2 The LCD screen	7
1.3 Operation knob control	8
1.4 Introduction to the connection part of keyboard controller	8
Introduction to control keyboard controller operations	9
2.1 Introduction to single key and combined keys	9
2.2 Detailed introduction to combined keys	9
2.3 Control code memory function	12
keyboard controller parameter Setup and inquiry	15
3.1 Keyboard controller protocol and Baud rate Setup	15
3.2 Keyboard controller system parameter Setup	15
3.3 Keyboard controller parameter Setup framework	16
3.4 Keyboard controller parameter inquiry	17
4: Typical connecting diagram	18
5: FAQs	19

Keyboard controller introduction

Keyboard controller is a requisite device for compact monitor system, which controls the positioning of all front speed domes, mounting bracket and electric lens, and also the out-door shield brush, auxiliary lamp.

Usually keyboard controller consists of many number keys and function keys. Number keys are used to control speed domes or decoder. Function keys are used to control front devices. LCD on console display control codes and working status of each monitor station.

One system has only one master control board, but many slave control board, which are usually located in the respective office to achieve remote control of the entire tele monitor control system.

Features of keyboard controller


- ★ Devices connected to RS485 bus can be set with different protocol and baud rate.
- ★ Update new program on line. According to the protocol and control codes provided by customer, compile update program. Customer can update firmware by connecting to keyboard controller to computer via RS485 bus.
- ★ One key to retrieve the protocol and baud rate of current control address.
- ★ All parameters can be set via control key operations.

Basic function of keyboard controller

- * RS485 control bus can control maximum 255 front devices (depending on the setting of communication chipset)
- * Standard RS485 I/O ports are all lightning-proof, strong for interference. Standard communication distance is as long as 1200m.
- * Uplink port can provide links to maximum 15 slave keyboard controllers.
- * Multiple protocol available for speed dome control.
- * Password to lock/unlock keyboard controller.
- * Key sound ON/OFF
- * Progressive speed dome control
- * LCD display, multi-dimension control knob control

Front board and back board introduction

1.1 Function keys on front keyboard controller

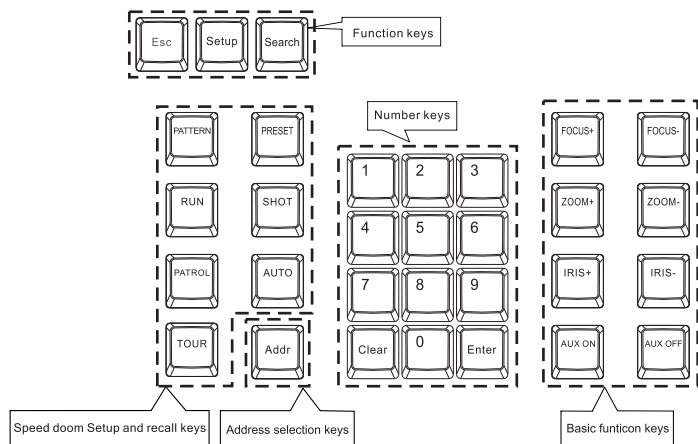

Function keys:

- 【Esc】** Back to previous menu .
- 【Setup】** Press for 3sec to set up key parameters .
- 【Search】** Inquire The Protocol & Baud Rate Of Current Address .

Speed doom Setup and recall keys:

(this function might be not available for part of protocols if the speed doom does not have this function)

- 【PATTERN】** Start/Esc to pattern record of speed doom, pressing for 3S to record pattern, and end to record pattern pressed again. This key should be used together with control knob or function key.
- 【RUN】** Recall the stored PATTEN. This key should be used together with number key and Enter key.
- 【PATROL】** Start/Esc to patrol record of speed doom, press this key to Enter patrol set, and Esc to patrol set press this key again. This key should be used together with control knob or function key.

- 【TOUR】** RUN speed doom patrol according to speed doom in memory. This Key should be used with number key and Enter key.
- 【PRESET】** Preset the original position of speed doom. This key should be used together with number key and **【Enter】** key.
- 【SHOT】** Recall the preset position of speed doom. This key should be used together with number key and **【Enter】** key.
(Some special function are achieved via recalling preset, e.g. Recall speed doom menu, recall integrated menu, pattern patrol, pattern scan, linear scan, et.)
- 【AUTO】** Control speed doom Automatically
- 【Addr】** Address selection key. Select decoder address, PTZ address.

Number keys:

- 【Clear】** Clear input.
- 【0】 ~ 【9】** number Key: 0、1、2、3、4、5、6、7、8、9.
- 【Enter】** Enter confirm input.

Basic funticon keys:







- 【FOCUS +】** Manual focus on distant object.
- 【FOCUS -】** Focus on closer object ,
- 【ZOOM +】** Zoom in to object, i.e enlarge object.
- 【ZOOM -】** Zoom out the lens to larger view field.
- 【IRIS +】** Increase aperture manually.
- 【IRIS -】** Downsize aperture.
- 【AUX ON】** AUX key turns on. Turn on AUX key. This key should be used together with number key and Enter key.
- 【AUX OFF】** AUX key turns off. Turn off AUX key. This key should be used together with number key and Enter key.

1.2 The LCD screen

All key operations will be displayed on LCD instantly. LCD will switch to Low-Power mode if the smart controller does not receive any input for more than 30 seconds. Screen will return to the initial state

1.3 Operation knob control


When control speed doom and mounting plate:

Operating	Output Control	Operating	Output Control	Operating	Output Control
	Upward		Downward		Left
Operating	Output Control	Operating	Output Control	Operating	Output Control
	Right		Zoom+		Zoom -

1.4 Introduction to the connection part of keyboard controller

Backboard : 1 5-pin port, 1 DC-12V port, 3 LED indicator:

The following map:

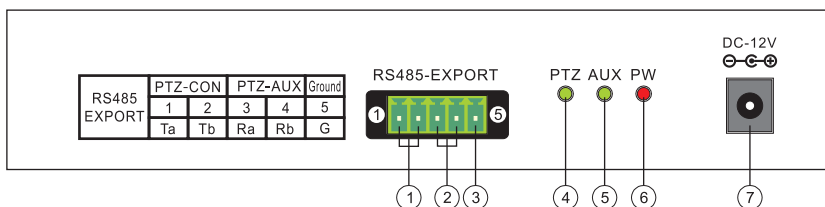

Detailed functions of each portion:

Item	Marked	Interface	DEscription
①	PTZ-CON	Control output (Ra/Rb)	Connect to speed doom RS485 bus(Ta)to RS485+,(Tb) to RS485-
②	PTZ-AUX	Slave keyboard controller input (Ra, Rb)	Connect to slave key port: Ra to Ta on slave , Rb to Tb on slave
③	Ground	Grounding(G)	grounding of communication cable
④	PTZ	PTZ indicator	Display output status: Flickering and GREEN
⑤	AUX	Auxiliary device input indicator	Flicker and GREEN when auxiliary device is connected
⑥	PW	Power indicatora	Always on, RED
⑦	DC-12V	DC power input	DC power input

Introduction to control keyboard controller operations

2.1 Introduction to single key and combined keys

2.1.1 Single key: When single key is pressed, the corresponding PTZ will respond.

Single key operations include: **【FOCUS+】**、**【FOCUS-】**、**【ZOOM+】**、**【ZOOM-】**、**【IRIS+】**、**【IRIS-】** and control knob

2.1.2 Combined key operations mean 2 or more keys, or key and knob are pressed, the corresponding PTZ will respond.

The operations include **【PATTERN】**、**【RUN】**、**【PATROL】**、**【TOUR】**、**【PRESET】**、**【SHOT】**、**【Addr】**、**【AUX ON】**、**【AUX OFF】**

2.2 Detailed introduction to combined keys

2.2.1 Enter PTZ mode:

If LCD display

CAN : XXX	BR : XXX
P : XXX	

, indicating the control key board is working in PTZ mode, if no, please **【Esc】** to back to PTZ mode.

2.2.2 Choose PTZ address:

In PTZ mode, press **【Addr】** and input the PTZ address number to control, then press **【Enter】**.

E.g. To control PTZ code 28,

Operation: Press **【Addr】**, LCD will display:

CAN : 028
CAN :

Input 28 via number keys, LCD will display :

CAN : 028	
CAN :	28

Press **【Enter】**, LCD will display :

CAN : 028	BR : XXX
P : XXX	

2.2.3 Set and recall pattern scan:

Setup: Choose the address to set pattern scan . Then press **【PATTERN】** key, the LCD will display:

CAN : XXX	BR : XXX
P : XXX	

 ;

E.g if we want to set the 1st pattern scan, press **【1】** and **【Enter】**, LCD will display:



CAN : XXX
PATTERN RECORD

 ;

Operate the control knob to stop or remain at certain position or zoom in/out lens, etc.

After Setup is complete, press **【PATTERN】** to stop recording pattern again,

And LCD will display:  .

Recall: Press RUN, LCD will display:  ; The speed doom will operate per the 1st pattern, LCD display: 

Run any single key operation will stop pattern scan and back to normal status.

Notes: There is only one a pattern of PELCOD, PELCOP protocols. Press


【PATTERN】 for 2S when set pattern firstly, and the other operations is same as operations of pattern of the other protocols.

2.2.4 Set and recall patrol:

Setup: Choose the address code of speed doom to set patrol. Then press


【PATROL】 key, LCD display: 

E.g. if we want to set the 1st patrol, press **【1】** and **【Enter】** , LCD display:

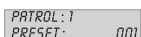

(Indicating we are setting the 1st preset point of No.001 patrol), move knob leftwards or rightwards to choose which preset point added to the track of this patrol.

Move knob downwards, LCD will display:  (indicating the

1st preset added in the 1st patrol). LCD will display :  , move knob leftwards or rightwards to change the time of staying this preset point.

Move knob downwards, LCD will display:  (indicating the


stay time of 1st preset point is 3S), Move knob rightwards, LCD will display:




(the move time from one preset point to another), move knob leftwards or rightwards to change the move time from one preset point to another.

Move knob downwards, LCD will display  . Repeat the above

operations till Setup is completed. When Setup is complete, press **【PATROL】** key,

LCD will display:  , and press **【Enter】** to memory and back, press **【Esc】** not to save and back.

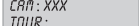Recall: Press **【TOUR】** , LCD display :  , Enter the patrol #

to recall.

Run any single key operation will exit patrol and back to normal status.


Notes:



- 1: Leftwards or rightwards of knob is selected value of function, downwards of knob is Entered and go on to next a function.
- 2: In Setup process, press **【Esc】** to exit Setup.
- 3: Time of all patrol of YAAN is same, so first item is time of Setup. Speed of patrol is default.
- 4: Time and speed of all patrol of RULE is same, so first item is time of Setup and second item is speed of Setup.

2.2.5 Set and recall preset point:


Set up: Choose the address of speed doom to set or recall.


Then press **【PRESET】** , LCD display:  ,

Operate knob to move to corresponding point, and zoom lens to specified position, then press the preset point # to set, e.g 6, press 6 and **【Enter】** , LCD display:  , If you want to continue to set more, repeat the above operations, press **【 Esc】** to exit Setup .

Recall: Press **【SHOT】** , LCD will display:  , input the preset point # to recall, e.g **【 6】** , then press **【Enter】** ,  , to recall more repeat the above operations, **【 Esc】** to exit recall.

2.2.6 Turn on/off AUX:

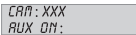Turn on: Choose the address of speed doom or decoder to turn on. Then press **【AUX ON】** , LCD display:  , to turn on the AUX #1, press **【1】** and **【Enter】** .


Turn off: Press **【AUX OFF】** , LCD display:  , to turn off AUX #1, press **【1】** and **【Enter】** .

Note: The above combined key might be no available form some protocols, or some products do not have this function. Therefore, some operations might not work on some devices. If you have similar problems, please refer to the manual of device to achieve some specific function.

2.2.7 keyboard controller lock:

This function is to manage keyboard controller via password to allow authorized user to operate. This function must be activated in keyboard controller setting menu. Refer to details in 3.1.2.2.

In normal mode, press **【 Esc 】** , LCD display:  ,

Input 4-digit password, press **【 Enter 】** , LCD display :  ,
indicating the keyboard controller is locked.

Press any key, LCD display:  ,

Input password, press **【 Enter 】** , the keyboard controller will be unlocked.

2.3 Control code memory function

Though the control keyboard controller has integrated some protocols, but in many cases, there are still non-compatible protocols, even the same code of the same protocol, some characters might be still different.

E.g. For function of PELCOD patrol recording, some manufacturer use code FF TA 00 07 00 00 CK, some FF TA 00 07 E0 E0 CK.

Note: FF is the prefix, no revising allowed.

TA is destination address, no revising allowed.

CK is check code, no revising allowed.

Thus code of PATROL FF TA 00 07 00 00 CK can be revised as FF TA 00 07 E0 E0 CK easily.

【 PATTERN RECORD 】 、 **【 PATTERN STOP 】** 、 **【 RUN 】** 、 **【 PATROL 】** 、 **【 TOUR 】** 、 **【 AUTO 】** can be revised.

2.3.1 Code format introduction

Two code formats, one is simple code, the other is number & character code.

Simple code, refers to codes in fixed format, e. g FF TA 00 07 00 00 CK

Codes with customized number, means fixed code used with customized number, which is denoted with -- , e.g. PELCOD has four formats for PATROL.

FF TA -- 07 00 00 CK

FF TA 00 -- 00 00 CK

FF TA 00 07 -- 00 CK

FF TA 00 07 00 -- Ck

Note: only one set of code can be numbers

E.g. If we want to input FF TA -- 07 00 00 CK, input **【1】** and **【Enter】** when prompted. Then in our final directive was issued to the FF TA 01 07 00 00 CK

2.3.2 Enter code learn and revise code

For example, change PELCOD AUTO key code A0 TA 00 07 00 63 AF CK into A0 TA -- 07 00 00 AF CK.

In normal mode, press **【Setup】** for 3sec, LCD display:

Input password(default 8888), press **【Enter】**, LCD display:

PTZ SETUP
595 SETUP

,

Move knob downwards, LCD display:

LEARN SETUP

,

Press **【Enter】**, LCD display:

SELECT PROTOCOL
PELCOD

,

Move knob downwards, LCD display:

SELECT PROTOCOL
PELCOD

,

Press **【Enter】**, LCD display:

SELECT BUTTON
PATTERN RECORD

,

Move knob upwards, LCD display:

SELECT BUTTON
AUTO

,

Press **【Enter】**, LCD display:

SELECT BUTTON
FF TR 00 07 00→

,

Cursor will stop at the first 0.

Move knob downwards, LCD display:

SELECT BUTTON
FF TR -0 07 00→

,

Move knob rightwards, LCD display:

SELECT BUTTON
FF TR -0 07 00→

,

cursor stop at the 2nd 0.

Move knob downwards, LCD display:

SELECT BUTTON
FF TR -- 07 00→

,

Move knob rightwards for 6 times, LCD display:

SELECT BUTTON
→63 CK

,

Move knob downwards for 6 times, LCD display:

SELECT BUTTON
←03 CK

,

Move knob rightwards, LCD display:

SELECT BUTTON
←03 CK

,

Move knob downwards for 3 times, LCD display:

SELECT BUTTON
←00 CK

,

Press **【Enter】**, buzzer will ring and LCD display:

SELECT BUTTON
AUTO

,

Next LCD will restore to **【AUTO】**

After Setup is completed, press **【Esc】** for 3 times to back to normal mode.

Note: When no learn code in memory, press **【AUTO】**, LCD display:

CAN : XXX AUTO
P: XXX BR: XXX

, the code sent by keyboard controller is A0 TA 00 07 00 63 AF CK. When learn code is available, the code sent by keyboard controller is A0 TA 01 07 00 00 AF CK.

2.3.3 Learning to delete or re-installed

When certain key of certain protocol has been learned code, re-Enter learn mode, the LCD will display:

SELECT BUTTON
DEL LEARNED?

, Press **【Enter】** to delete, to learn more, move knob rightwards, LCD will display:

SELECT BUTTON
CONTINUE?

, press **【Enter】** again.

keyboard controller parameter Setup and inquiry

3.1 Keyboard controller protocol and Baud rate Setup

E.g. To set protocol of address 28 as PelcoP, Baud rate 9600.

The operations are:

In normal mode press Setup for 3sec, LCD will display:

CAM :	XXX
PASSWORD :	----

 ,

Input password(default 8888), press **【Enter】** , LCD display :

PTZ SETUP
595 SETUP

Press **【Enter】** , LCD display :

CAM :	XXX
P: PELCOD BR:	024

 ,

Press **【2】** , **【8】** and **【Enter】** key, LCD display:

CAM :	028
P: PELCOD BR:	024

 ,

Move knob downwards, LCD display :

CAM :	028
P: PELCOD BR:	024

 ,

Press **【Enter】** , buzzer rings, LCD display :

CAM :	028
P: PELCOD BR:	024

 ,

Move knob rightwards, LCD display :

CAM :	028
P: PELCOD BR:	024

 ,

Move knob upwards, LCD display:

CAM :	028
P: PELCOD BR:	048

 ,

Press **【Enter】** , buzzer rings, LCD display:

CAM :	028
P: PELCOD BR:	048

 ,

After Setup is completed, press **【Esc】** for 3 times to back to normal mode.

Note: To set the same protocol and baud rate for front device, Enter this screen

CAM :	0-255
P: XXX BR:	XXX

 , Then set the protocol and baud rate.

3.2 Keyboard controller system parameter Setup

System parameters include password, restore default settings, key tone ON/OFF, key ID Setup, keylock, etc. We will describe the Setup process by taking restoring default settings and key lock as examples.

3.2.1 Restore default settings

In normal mode, press **【Setup】** for 3 sec, LCD display:

CAM :	XXX
PASSWORD :	----

 ,

Input password(default 8888), press **【Enter】** , LCD display:

PTZ SETUP
595 SETUP

 ,

Move knob downwards, LCD display :

PTZ SETUP
595 SETUP

Press **【Enter】** , LCD display:

PW SETUP
DEFAULT SETUP

Move knob downwards, LCD display:

PW SETUP
DEFAULT SETUP

Press **【Enter】** , LCD respond:

PW SETUP
DEFAULT SETUP ?

Press **【Enter】** again, buzzer rings, LCD display:

PW SETUP
DEFAULT SETUP

 1s,

Restore default settings successfully(to abort the process, press **【Esc】** for 2 times to back to normal mode).

3.2.2 Keyboard controller lock ON/OFF

In normal mode, press **【Setup】** for 3sec, LCD display:

CAM : XXX
PASSWORD: ----

 ,

Input password(default 8888), press **【Enter】** , LCD display:

PTZ SETUP
SYS SETUP

 ,

Move knob downwards, LCD display:

PTZ SETUP
SYS SETUP

 ,

Press **【Enter】** , LCD display:

PW SETUP
DEFAULT SETUP

 ,

Move knob upwards, LCD display:

LOCK SETUP

 ,

Press **【Enter】** , LCD display:

LOCK OFF

 ,

Indicate the status of key lock.

Move knob rightwards, LCD display:

LOCK ON

 ,

Press **【Enter】** , LCD display:

LOCK PW: ----

 ,

Input 4-digit password, press **【Enter】** , LCD display:

LOCK SETUP

 ,

Press **【Esc】** for 2 times, exit Setup and back to normal mode.

3.3 Keyboard controller parameter Setup framework

>PTZ Setup	>ADDRESS: XXX	PROTOCOL	PELCOD、PELCOP、RULE, etc
		Baud Rate	1200、2400、4800、9600、19200
	>ADDRESS: 0-254	PROTOCOL	PELCOD、PELCOP、RULE, etc
		Baud Rate	1200、2400、4800、9600、19200

>SYSTEM Setup	>SET PASSWORD	OLD PW:	Figure 4
		NEW PW:	Figure 4
		AGAIN PW:	Figure 4
	>LOAD DEFAULT	SURE?	【Enter】 Confirmed, 【Esc】 Withdrawal
	>SOUND SET	SOUND ON	Knob about choice
		SOUND OFF	Knob about choice
	>KEYBOARD ID SET	KEYBOARD ID	number 【0】 - 【15】
>LOCK SET	LOCK OFF	Knob about choice	
	LOCK ON	【Enter】 , Enter a password state	
>LEARN Setup	SELECT P: PelcoD	【PATTERN RECORD】	FF TA 00 1F 00 00 CK
	SELECT P: PelcoD	【PATTERN STOP】	FF TA 00 21 00 00 CK
	SELECT P: B01	【RUN】	FF TA 00 23 00 00 CK
	SELECT P: YAAN	【PATROL】	FF TA 00 1F 00 00 CK
	SELECT P: SAMSUNG	【TOUR】	FF TA 00 07 00 00 CK
	SELECT P: RULE	【AUTO】	FF TA 00 07 00 63 CK


3.4 Keyboard controller parameter inquiry

In normal mode, press **【Search】** to inquiry about keyboard controller status
keyboard controller parameter framework

P: xxxxx B: xxxx	The agreement addresses the control and baud rate		
>PTZ SEARCH	>Address: 001	PROTOCOL	Address correspondence agreement
		Baud Rate	Address correspondence Baud Rate
>SYSTEM SEARCH	KEYBOARD ID: XX	Two of the keyboard controller ID	
	SYS SN: XXXXXXXXX	8 fuselage numbers	
	MODEL:XXXXXXXXXX	Ten of the largest Model	
	LOCK XXX(ON/OFF)	That set up the current situation Keyguard	
	SOUND XX(ON/OFF)	Keys tone that the current settings of	

Typical connecting diagram

4: Typical connecting diagram

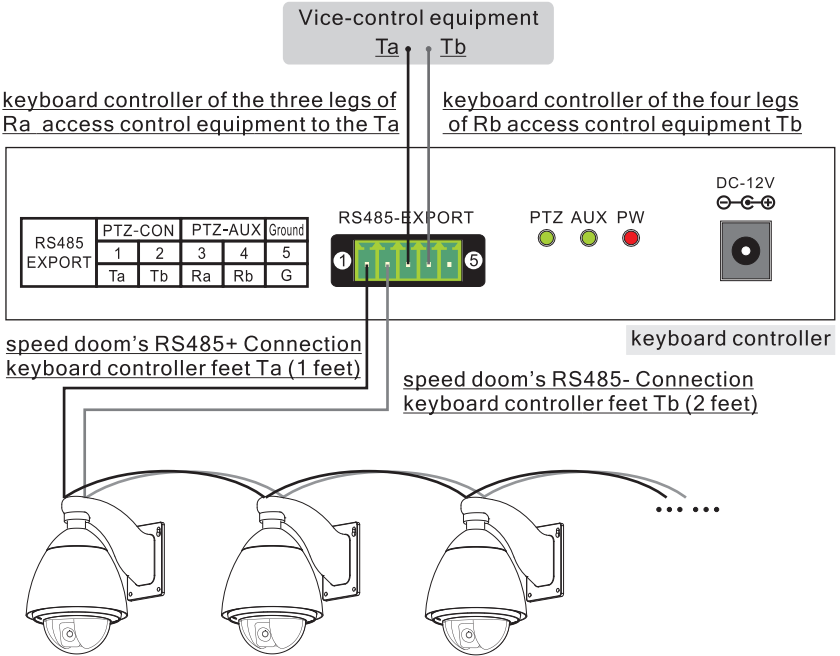

Introduction:

- 1、 Control code output: speed doom's RS485+ should be connected to Ta of keyboard controller, RS485- to Tb. Uplink control: Ra of keyboard controller to Ta of slave device, Rb to Tb.
- 2、 Vice-control equipment: the DVR can be RS485 output, keyboard controller, RS485 output.

Function features: Both master keyboard controller and other slave devices can control the speed dome, to enable customer to enjoy remote control and the easy on-site operations

5: FAQs

Symptom: keyboard controller cannot control the speed doom.

Analysis 1: check the hardware: RS485.

Methods: Step 1: RS485 A and B is reversed.

Step 2: Check RS485 cable continuity is OK or not.

Analysis 2: Check the software settings: keyboard controller and speed doom address, protocol, baud rate.

Methods: Step 1: Press **【Search】** to check the current protocol and baud rate is correct or not.

Step 2: Restore the settings to default setting and reset.

Analysis 3: Check PTZ LED will flicker or not when communicating with speed doom.

Methods: Step 1: If PTZ LED flickers, the keyboard controller is free of problems.

Step 2: If PTZ LED does not flicker when communicating, the RS485 port might be defective.

Symptom: Slave device cannot control speed doom.

Analysis 1: Check hardware RS485 cable.

Methods: Step 1: Check RS485 A and B is reversed or not.

Step 2: Check RS485 cable continuity is OK or not.

Analysis 2: Check the AUX LED on master keyboard controller will flicker or not when communicating.

Methods: If PTZ LED flickers, then the settings of slave device might be the problem. Please check address, protocol and baud rate.