


Your CCT715 Digital Video Recorder has the option to allow a connection to a P.C monitor or LCD screen. This can be accomplished by installing a special VGA card assembly. This feature can be easily installed and allows the flexibility of selecting PAL or NTSC mode and the resolution quality via a 4 way dipswitch.

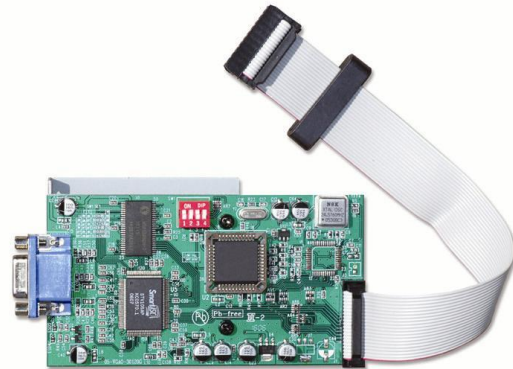

This VGA board assembly has been designed to only fit the CCT715 Digital Video Recorder range. The unit is supplied with PCB, ribbon cable, mounting bracket and screws. It will be necessary to press out the VGA blanking plate on the rear of the DVR to fit the VGA board.

On the board there is a red dipswitch unit. This allows the following settings to be made:

Resolution	Dipswitch 1	Dipswitch 2	Dipswitch 3
40 x 480 60Hz	ON	ON	ON
800 x 600 60Hz	ON	ON	OFF
1024 x 768 60Hz	ON	OFF	ON
640 x 480 75Hz	ON	OFF	OFF
800 x 600 75Hz	OFF	ON	ON
1024 x 768 75Hz	OFF	ON	OFF

Mode	Dipswitch 4
PAL	ON
NTSC	OFF

The standard default settings for these dipswitches are highlighted above.

Fitting Instructions

1. Power off CCT715 DVR
2. Assemble VGA board by attaching bracket to VGA board using two screws supplied.
3. Set dipswitches as required Default setting is 1 = ON 2 = OFF 3 = ON 4 = ON
4. Attach ribbon cable ensuring location tab is correctly seated.
5. Remove lid on DVR – remove two screws at either side and four screws on back
6. Press out VGA blanking plate on rear of CCT715 DVR.
7. Fit VGA board using two securing screws.
8. Fit ribbon cable to PCB.
9. Refit DVR lid.
10. Power up DVR.

All specifications are approximate. Kovert.com reserves the right to change any product specifications or features without notice. Whilst every effort is made to ensure that these instructions are complete and accurate, kovert.com cannot be held responsible in any way for any losses, no matter how they arise, from errors or omissions in these instructions, or the performance or non-performance of the equipment that these instructions refer to.