











5MP Covert Range

xSEE906 xSEE925 xSEE945 xSEE955 xSEE965

© 2021 System Q Ltd

Table of Contents

| Part 1 | Introduction to the 5MP Covert Range | 1 |
|--------|--|----|
| 1 | Tools & Handy Extras | 1 |
| Part 2 | Connections, Dimensions & Key Features | 2 |
| 1 | SEE906 COVERT 3.6MM MODULE | 2 |
| 2 | SEE925 COVERT 3.7MM CONE PHOLE MODULE | 3 |
| 3 | SEE945 ANTIVANDAL CAMERA CORNER | 4 |
| 4 | SEE955 COVERT 3.6MM SMOKE | 5 |
| 5 | SEE965 COVERT 3.6MM SMOKE | 6 |
| Part 3 | 4-In-1 Technology | 7 |
| Part 4 | OSD Menu | 8 |
| 1 | Key Menu Settings | g |
| Part 5 | Troubleshooting | 10 |
| 1 | Camera Rebooting / Turning Off | 10 |
| 2 | Poor Quality Images | 10 |
| 3 | Image is Black & White | 10 |
| 4 | NCD / No Image Displayed on Recorder | 10 |
| Part 6 | General Maintenance | 11 |
| Part 7 | Specification | 12 |
| Part 8 | Conditions | 13 |
| 1 | General Company Disclaimer | 13 |
| 2 | WEEE Declaration | 13 |
| 3 | Copyright | 13 |
| | Index | 14 |

1 Introduction to the 5MP Covert Range

Compatible with most current DVRs on the market including the ZIP DVR Supa and Xtra Models.

These cameras are multi-format with TVI, AHD, CVI and CVBS modes, which can be changed with the 4-in-1 dip switch.

1.1 Tools & Handy Extras


- Screwdriver
- Drill
- Hammer
- POW151 12V DC 500mA Plug-in PSU
- Drill bits
- BNC Crimp Tool & BNCs
- RG59 Coax Cable
- Digital Multi-Meter
- LCD400K CCTV Test monitor

2 Connections, Dimensions & Key Features

The camera is provided with a fly lead with a 2.1mm DC socket.

It is recommended to use a power supply that is rated higher than the current consumption of the camera i.e. the current consumption is 85mA on so add approximately 50% headroom, and use a regulated power supply rated at 130mA or above. The camera is polarity sensitive so connections must be correctly made.

2.1 SEE906 COVERT 3.6MM MODULE

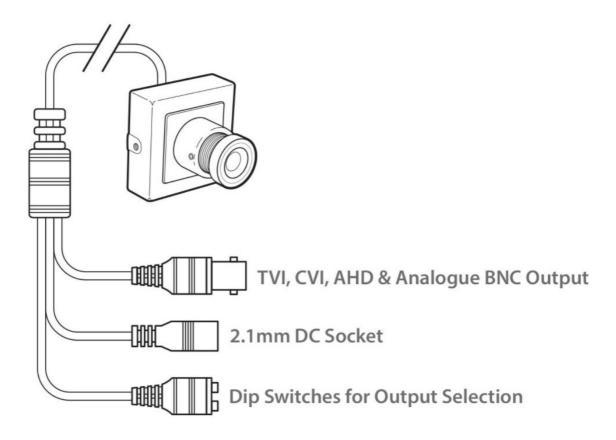


SEE906 Dimensions




FEATURES

- 5MP Resolution
- TVI, CVI, AHD or Analogue Output
- Low Light 0.001 Lux
- Mounting Bracket Included
- 3.6mm Wide Angle Board Lens
- Tiny Size Just 35x35mm

2.2 SEE925 COVERT 3.7MM CONE PHOLE MODULE

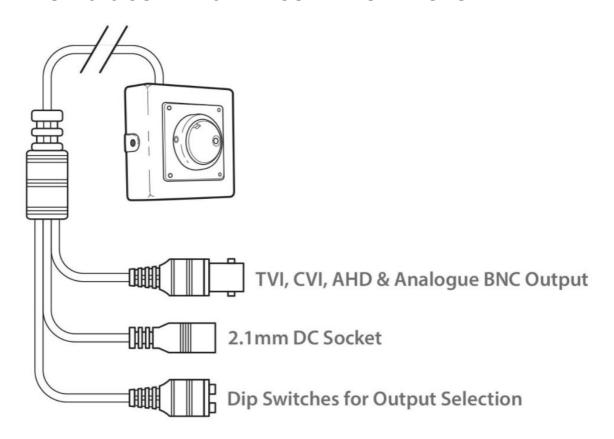

SEE925 Dimensions

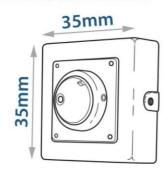


FEATURES

- 5MP Resolution
- Mounting Bracket Included
- Low Light 0.001 Lux
- Small Aperture only needs a tiny hole!
- TVI, CVI, AHD or Analogue Output
- Tiny Size Just 35x35mm

Kovert.com

3


2.3 SEE945 ANTIVANDAL CAMERA CORNER

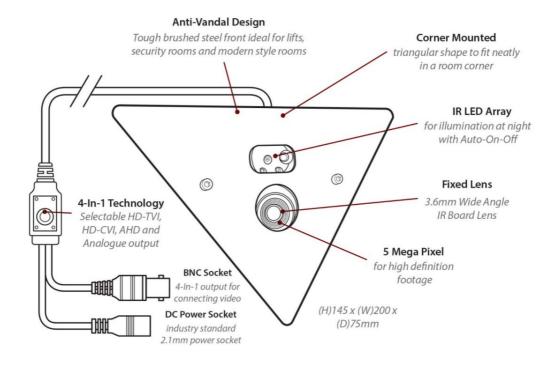

FEATURES

- Anti-Vandal Design
- Ideal for Lifts & Stock or Security Rooms
- Low Light 0.001 Lux
- Close Up IR Array
- TVI, CVI, AHD or Analogue Output
- True Day/Night

2.4 SEE955 COVERT 3.6MM SMOKE

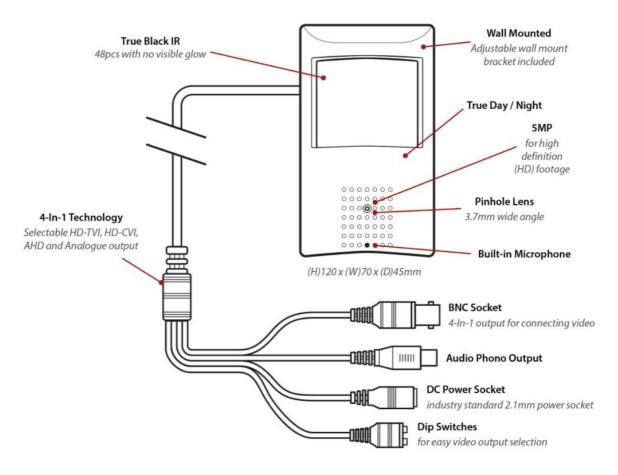


FEATURES

- Realistic PIR Cases
- TVI, CVI, AHD or Analogue Output
- Built-in Microphone
- 3.7mm Pinhole Lens
- Wall Bracket Included
- Hidden True-Black IR LEDs

5

2.5 SEE965 COVERT 3.6MM SMOKE

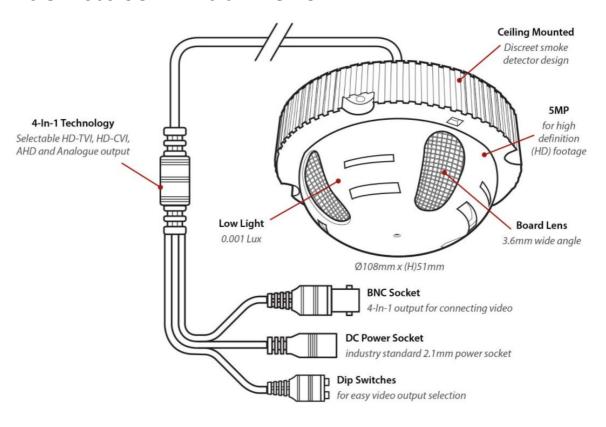

FEATURES


- Hi-Res, Stylish & Discrete
- Low Light 0.001 Lux
- 3.6mm Board Lens
- TVI, CVI, AHD, CVBS Output

3 4-In-1 Technology

Selectable HD-TVI, HD-CVI, AHD and CVBS (Analogue) Output. As default the Covert Cameras are set to HD-TVI 5MP which will work with the, ZipSupa and ZipXtreme DVRs, however the output can be changed to AHD, CVI or CVBS if required.

This output can be changed either with the dip switches on the fly-lead of the camera. Please note the "Output Mode" in the menu of the DVR won't change the format, as the dip switch overrides the output.

The dip switch configuration can be found below:-

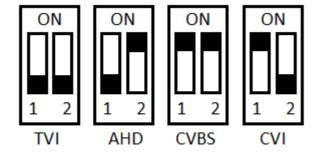


4 OSD Menu

Access to the camera menu is by Coaxitron. For the ZIP DVRs, ZIP Coaxitron is set as default.

To access the Cameras Menu via coaxitron:-

- 1. Click on the image in Live view
- 2. Click on the PTZ button at the bottom of the screen
- 3. Click on the IRIS + button to display the menu

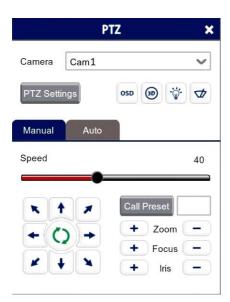

Use the directional arrows to move up and down through the menu.

Use the directional arrows left and right to change the option.

Use IRIS + to select & enter that menu option.

| AE | BRIGHTNESS | 0 ~ 20 (Default 7) | | | |
|---------------|----------------|---|--|--|--|
| | EXPOSURE MODE | GLOBE/ BLC / FLK | | | |
| | LEVEL | 1 ~ 9 (Default 1) | | | |
| | RETURN | | | | |
| AWB | MODE | ATW / MWB | | | |
| | RGAIN | 1 ~ 127 (Default 40) | | | |
| | BGAIN | 1 ~ 127 (Default 30) | | | |
| DAY – NIGHT | MODE | EXT / AUTO / COLOR / B/W | | | |
| | RETURN | | | | |
| IMAGE ENHANCE | CONTRAST | 1 ~ 16 (Default 3) | | | |
| | SHARPNESS | 1 ~ 16 (Default 5) | | | |
| | COLOR GAIN | 1 ~ 16 (Default 4) | | | |
| | DNR | 1 ~ 16 (Default 4) | | | |
| | MIRROR | DEFAULT / H / V / HV | | | |
| | D-WDR | OFF / ON | | | |
| | RETURN | | | | |
| VIDEO OUTPUT | HD | NO ADJUSTMENT SEE <u>4-In-1 Technology</u> 7 | | | |
| | VIDEO STANDARD | 5MP 20 / 5MP 12.5 / 4MP 25 / 4MP 30 / 4MP 15 / 1080P 25 / 1080P 30 | | | |
| | REBOOT & APPLY | | | | |

| | RETURN | | | | |
|--------------|---|--|--|--|--|
| LANGUAGE | ENGLISH / SIMPLIFIED CHINESE / TRADITIONAL CHINESE / RUSSIAN / ITALIAN / PORTUGUESE | | | | |
| RESET | | | | | |
| SA VE – EXIT | | | | | |
| EXIT | | | | | |

4.1 Key Menu Settings

Exposure Mode - Globe is set as default, it automatically sets the required shutter speed for the current light level. The shutter speed will automatically detect the required length of time to keep the digital sensor exposed to light. FLK option sets the shutter speed to stop synchronisation with lighting so that pulsing effect is minimised.

AWB (White Balance) - This allows the colour adjustment of the camera to be set up so objects appear a natural colour. ATW (Automatic tracking white balance) continually tracks and adjusts the white balance, making it suitable for use in cameras in which the image content and lighting are subject to changes.

Day & Night - This setting allows you to lock the camera in a colour or B&W mode or have it automatically switch External is set as default, the switch between colour and black & white is controlled by an external trigger In this a light dependent resistor. Delay can be set which will instruct the camera to wait for a set length of time before switching. This accommodates for any temporary drops in light

DNR (**Noice Reduction**) - Noise Reduction is the process of removing noise from the video signal by applying a digital filter. 2D noise reduction reduces noise in the foreground of the image where as 3D noise reduction reduces noise in both the foreground and the background of the image.

D-WDR - Digitally adjusts the exposure in areas of the frame to maintain optimum levels in both the dark and bright areas of an image.

Reset - Defaults the camera to factory settings. This setting helps when fault finding issues with the camera to ensure all settings are defaulted.

5 Troubleshooting

5.1 Camera Rebooting / Turning Off

A. Check the voltage of the camera (under load) if below 10.8V then you will need to move the power supply closer to the camera.

B. For 12V DC cameras only ever use regulated power supplies so that you can be sure that the camera is always receiving the correct voltage.

Note:- SEE945 & SEE955 models draw more current at night time as the cameras have IRs built in.

C. Use thicker gauge copper cabling to reduce the voltage drop.

5.2 Poor Quality Images

A. Check the fly-lead is set to the correct output – see 4-In-1 Technology 7

B. If set to CVBS, then this is a low quality video output for legacy systems (Analogue), when using a 5 MegaPixel DVR or above then use another video format, like HD-TVI.

- C. Reset the camera menu via Zip Coaxitron OSD Menu 8
- D. Check if your DVR supports 5 MegaPixel cameras.

5.3 Image is Black & White

- A. Check the video format your DVR supports, then set the camera to the relevant video format see the 4-In-1 Technology 7
- B. Reset the camera menu via Zip Coaxitron OSD Menu 8
- C. Check if your DVR supports 5 MegaPixel cameras.

5.4 NCD / No Image Displayed on Recorder

- A. Test that the camera has the correct voltage supplying it, you must do this with the camera connected so that there is load on the PSU. A 12V DC camera should have at least 10.5V DC connected to it.
- B. The camera can not function without the correct power supply. For 12V DC cameras only ever use regulated power supplies so that you can be sure that the camera is always receiving the correct voltage.
- C. Ensure that the BNC BNC lead that you connect between the camera and DVR has no shorts or open circuits. If you are making your own lead, don't forget the lead must have two wires connected to complete the circuit, Video and Ground.

6 General Maintenance

- Ensure that nothing is obscuring the field of view, position the camera to ensure the Lens can see clearly.
- Routinely clean the camera to prevent dust build up as this can effect the performance of the camera. We recommend a damp non-abrasive microfibre cloth.
- Check that the cameras are firmly attached.
- Check playback in the recorder to ensure the camera is recording properly.

7 Specification

| | | | | Г | | | | |
|------------------|------------------------|--------------|-----------------------------|---------------|-------------|--|--|--|
| | SEE906 | SEE925 | SEE945 | SEE955 | SEE962 | | | |
| Image Sensor | 1/2.9" | | | | | | | |
| Resolution | 5MP (HD) / 720TVL (At | | Analogue) | 5MP | | | | |
| Lens Type | 3.6mm Fixed | 3.7mm Fixed | 3.6mm Board | 3.7mm Fixed | 3.6mm Board | | | |
| | Board | Pinhole | Lens | Pinhole | Lens | | | |
| Image Output | TVI / CVI / AHD / CVBS | | | | | | | |
| Min.Illumination | 0.001 Lux | | 0.001 Lux / 0 Lux IR On | | 0.001 Lux | | | |
| Day/Night | Electronic | | Mechanical (True Day-Night) | | Electronic | | | |
| Input Voltage | 12V DC | | | | | | | |
| Current | 95mA | | 95mA / 320mA | 95mA / 400mA | 95mA | | | |
| Consumption | | | IR On | IR On | | | | |
| Signal to Noise | More than 50dB | | | | | | | |
| Ratio | | | | | | | | |
| Gain Control | Automatic | | | | | | | |
| Video | BNC Socket | | | | | | | |
| Connection | | | | | | | | |
| Power | 2.1mm DC Socket | | | | | | | |
| Connection | | | | | | | | |
| WDR | Yes | | | | | | | |
| Protocol | UTC | | | | | | | |
| Bracket | Sup | plied | N/A | | Supplied | | | |
| Finish | | | Silver | Wł | nite | | | |
| Build | Metal | | | Pla | stic | | | |
| Operating | -10°C - +60°C | | | | | | | |
| Temperature | | | | | | | | |
| White Balance | Auto / Manual | | | | | | | |
| Dimensions | (H) 35 x (W) | (H) 35 x (W) | (H) 100 x (W) | (H) 120 x (W) | 108mm Dia x | | | |
| | 35 x (D) | 35 x (D) | 198 x (D) | 70 x (D) 45mm | (H) 51mm | | | |
| | 29mm | 21.5mm | 107mm | (Ex Bracket) | | | | |
| IR Wavelength | N/A | | 850nM | 940nM – True | N/A | | | |
| | | | | Black | | | | |
| | | | | | | | | |

8 Conditions

8.1 General Company Disclaimer

All specifications are approximate. System Q Ltd reserves the right to change any product specifications or features without notice. Whilst every effort is made to ensure that these instructions are complete and accurate, System Q Ltd cannot be held responsible in any way for any losses, no matter how they arise, from errors or omissions in these instructions, or the performance or non-performance of the equipment that these instructions refer to.

8.2 WEEE Declaration



This symbol on the products and/or accompanying documents means that used electronic equipment must not be mixed with general household waste. For treatment, recovery and recycling please return this unit to your trade supplier or local designated WEE/CG0783SS collection point as defined by your local council.

8.3 Copyright

© Copyright 2021

Kovert is a registered trademark of System Q Ltd, Chesterfield. Derbyshire. S40 2WB

Index

- 4 -

4-IN-1 7

- A -

AHD 7

- B -

BNC 2

- C -

Cleaning 11
Connection 7
Connections 2
Copyright 13
CVBS 7
CVI 7

- D -

Declaration 13 Dimensions 2 Disclamer 13

- E -

Equipment 1

- F -

Fault Finding 10 Features 2

- G -

General Disclaimer 13

- | -

Introduction 1

- K -

Key Features 2

- M -

Maintenance 11 Menu 8

-0-

OSD 8 Output 7

- S -

Setup 2 Specification 12

- T -

Technical Specification 12
Tools 1
Troubleshooting 10
TVI 7

- V -

Video 7

- W -

WDR 8 WEEE Declaration 13

© 2021 System Q Ltd